

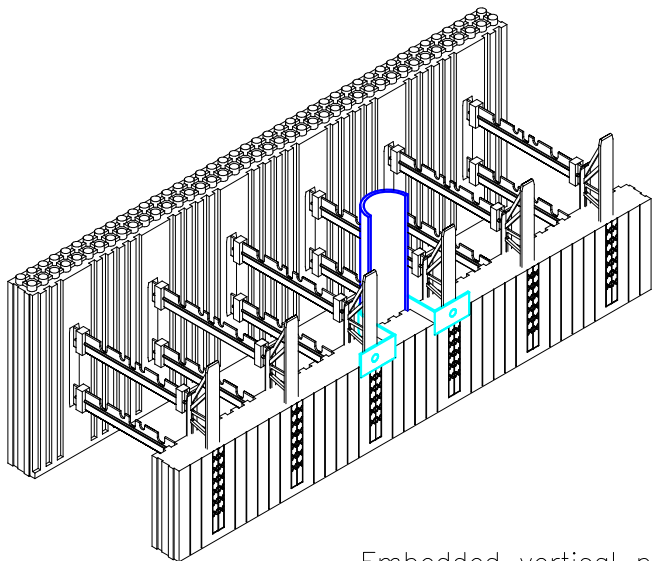


PVC pipe cut in half.
 Attach to inside foam panel.
 Support with metal plumbers tape.
 Block top of PVC pipe
 prior to concrete pour.

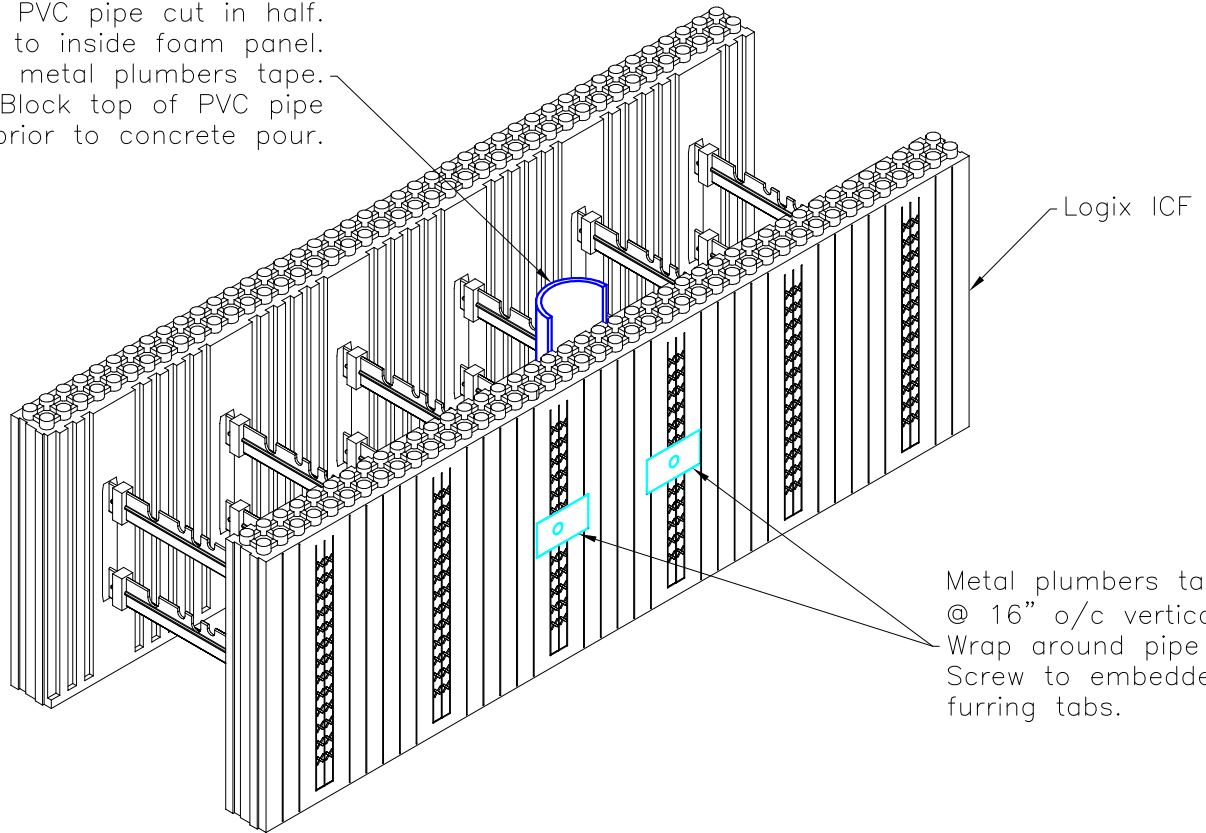

Embedded vertical pipe –
 Foam panel partially
 removed for clarity

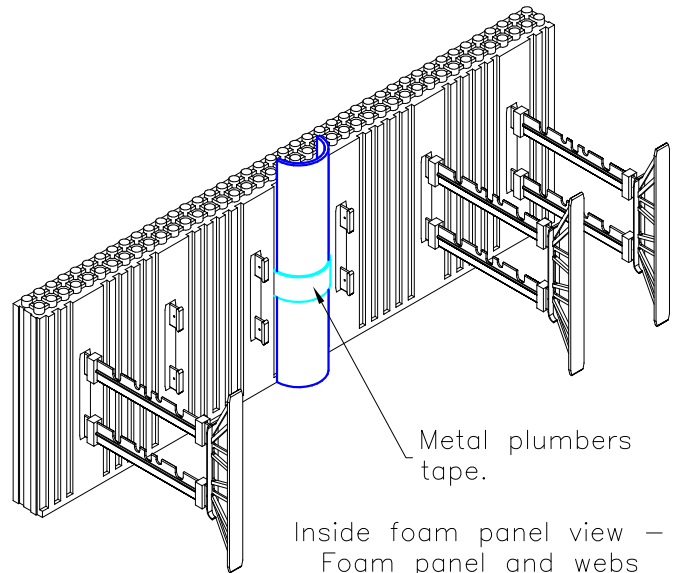

Inside foam panel view –
 Foam panel and webs
 partially removed for
 clarity.